



STORM COLLAR INSTALLATION INSTRUCTIONS

Important: Read Instructions Before Installation.

1. Wrap the Storm Collar around the pipe to fit the collar to the outside dimension of the pipe.
2. Insert the tab into the slot. Bend the tab back over the slot, 180°, to secure to collar.
3. Slide the Storm Collar down the pipe so it rests on top of the flashing.
4. Use an appropriate exterior sealant to seal the top of Storm Collar to the pipe. Form the sealant into a slope over the connection between the pipe and the Storm Collar to guide the water away from the pipe. Seal the exposed pipe surface to the collar.
5. Adhere to the installation requirements as determined by the regulatory authorities for your region.

Visit the Menzies Metal Products' website for additional product information. Drawings, Specifications and Instructions are available for most products online at www.menzies-metal.com or scan the QR code.



Menzies Metal Products

19370 60th Avenue, Surrey, BC V3S 3M2
800-665-8840 sales@menzies-metal.com
www.menzies-metal.com

More Than Just Metal

E. & O.E
01242014