

INNOVATIVE IDEAS SINCE 1978



MENZIES METAL PRODUCTS

UV456

UNIVERSAL DRYER/BATHROOM VENT

INSTALLATION INSTRUCTIONS


PART 1:

Ensure that there are no obstructions or trusses located beneath the new vent location prior to installing vent on roof. Minimum clearance of 9"W x 8.5"H required. Mark center of location with screw so it can be located on the roof.



PART 2:

Using the screw to mark center, outline the 9" width and 8.5" height on the roof. Cut hole. Remove nails under the shingles within the vent flange area.

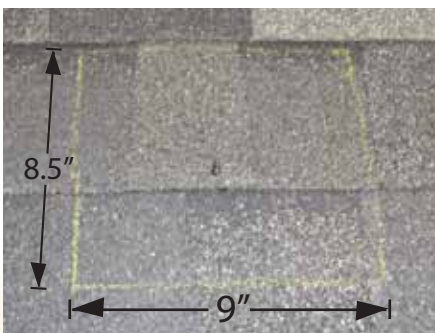

Marked hole.



Cut out.

PART 3:

Slide vent under shingles.



Sliding under shingles



Vent in place



MORE THAN JUST METAL

1.800.665.8840

sales@menzies-metal.com | www.menzies-metal.com



PART 4:

Using the pre-punched holes, nail vent in place. Secure shingles if required.



PART 5:

For a 4" pipe see step 6. For the 5" or 6" pipe, make a 3" incision along the appropriate seam. Tear the smaller size away for the adaptor and discard.



3" incision along seam



Tearing smaller size out

PART 6:


Secure the pipe to the adaptor with the duct strap provided. Tape or screws optional.



Duct strap installed over pipe

PART 7:

Insert adaptor into vent. Turn adaptor to lock into place. Listen for click to indicate lock.

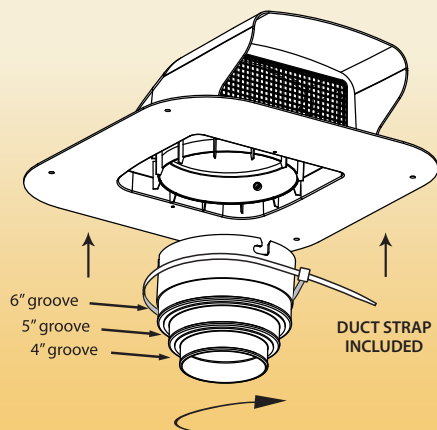

Insert adaptor into vent



Turn adaptor to lock into place